
HOLTKÖTTER®

The Ultimate Lighting Machines™

2915 Commers Drive, Suite 1000, Eagan, MN 55121
Voice: (800) 899-5444 • Fax: (888) 552-8661
e-mail: customerservice@holtkoetter.com
www.holtkoetter.com

Swing-Arm LED Wall Sconce

Technical Specifications

LED: 1x LED

System Power Consumption: 6 Watts Low-Voltage

Light Output: 680 Lumens

Light Color: 2700 Kelvin / CRI >90

Control: Touch Dimmer - the push-button switch on the front of the sconce is the touch dimmer which is equipped with a memory function and a Soft Start / Soft Stop function.

To turn on the light, press and hold the button until the sconce reaches the desired brightness. Push and hold the button again to reduce the brightness, releasing it when desired brightness is achieved. Using the memory function, press the button briefly to restore the light setting from the last time the sconce was turned off (soft start).

To turn off the light, press the button once (soft stop).

Installation instructions on reverse.

ASSEMBLY INSTRUCTIONS FOR

Swing-Arm LED Wall Sconce

No. 9696*LED



Care Instructions

Use only a soft, dry cloth to clean. If necessary, a slightly damp, soft cloth can be used to spot clean. Do not use common household cleaners on lamps or fixtures, as the lacquer on the outside of the brass may be damaged as a result. Enjoy your new Holtkötter lamp.

HOLTKÖTTER®

e-mail: customerservice@holtkoetter.com

www.holtkoetter.com

Installation Instructions

Please make sure that the following parts are enclosed:

- A. 2.5 mm Allen wrench (#8)
- B. 2 mm Allen wrench (#3)

IT IS FIRMLY RECOMMENDED THAT A LICENSED ELECTRICIAN INSTALL THIS FIXTURE.

1. Remove the crossbar strap/mounting plate assembly (5) from the back of the sconce using the allen wrench (3) provided. Loosen the set screws (4) on each side of the sconce.
2. Unscrew the hex nuts on the front of the mounting assembly to release the crossbar strap.
3. Mount the crossbar strap to the outlet box.
4. If the round backplate is needed to cover the outlet box, no further disassembly is necessary. Reassemble the mounting plate/finished plate assembly to the outlet box and go to step 6.
5. If the round backplate is not necessary to cover the outlet box, unscrew it from the mounting plate and attach the mounting plate to the crossbar strap.
6. Connect the wires from the sconce with the wires in the outlet box according to generally accepted electrical standards.
7. Mount the fixture to the mounting assembly (5) and secure with set screws (4).
8. To adjust the angle of the swing arm at the wall plate, use allen wrench (8). To adjust the angle of the reflector, use allen wrench (3).

ASSEMBLY INSTRUCTIONS FOR Swing-Arm LED Wall Sconce No. 9696*LED

