
HOLTKÖTTER INTERNATIONAL, INC.

155 Hardman Avenue South, South St. Paul, MN 55075

fax: (888) 552-8661 • phone: (800) 899-5444

www.holtkoetter.com

e-mail: customerservice@holtkoetter.com

This fixture is shipped knocked down (KD) to avoid breakage of the delicate Delft pieces. Please make sure that the following parts are enclosed:

1. A Delft column assembly
2. 5 pre-wired arms
3. A canopy kit consisting of 3 feet of chain, hanging hardware, and canopy


COLUMN ASSEMBLY

1. Lay all the parts on a soft, dry cloth to avoid scratches and damage.
2. Take the Delft column assembly apart starting at the bottom loop until you get to the center body (this is where the arms will be attached). As you remove the parts, set them down in the order they were removed. That way you will know how to put the fixture back together.
3. Assemble the arms to the center body. To do this, take the fixture wire and ground wire out of the canopy kit. Push the fixture wire and ground wire through the top loop of the fixture into the column and through the coupling. Both the fixture wire and ground wire must be pulled through the coupling so that they lead into the center body.
4. Connect the copper ground wire to the ground terminal.
5. Connect the fixture wire to the arm wires. The fixture wire (=lamp cord) has a marked side and an unmarked side. The marked side of the wire is rough and connects to the white (=neutral) wire coming out of the arms. The smooth side connects to the black (=hot) wire coming out of the arms. We have supplied wire nuts to make these connections. Please use a wire nut crimper to make good and secure connections.
6. Once the connections are made, push the wires back into the center body and put the parts back on the fixture the way they came off the column. The column assembly is now complete.

ASSEMBLY INSTRUCTIONS FOR

Authentic Holland Delft & Dutch Masters

5315/5

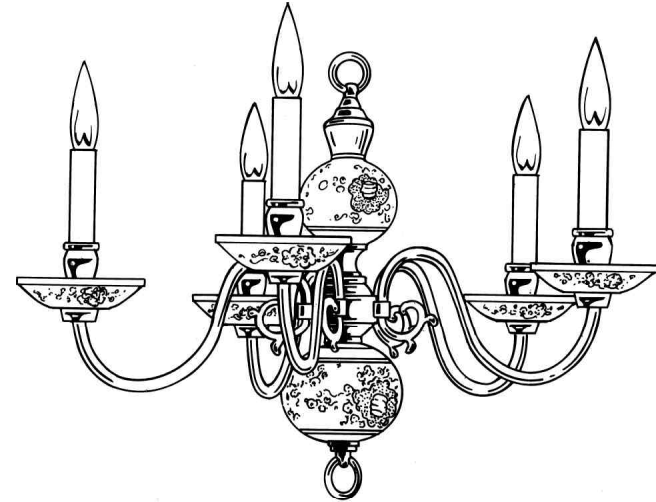

HANGING ASSEMBLY

1. Attach the chain to the top loop of the fixture and pull the wire through the chain.
2. Once the wire is pulled through the chain, attach the other side of the chain to the screw collar loop and screw the fixture bar over the 1/4 IP threaded nipple.

Now the fixture is ready to be hung.

WIRING INTO THE OUTLET BOX

Connect the copper ground wire to the ground wire on the outlet box. The fixture wire (=lamp cord) has a marked side which is rough, and an unmarked side which is smooth. Holding your thumb over both sides of the wire, you can feel the rough and smooth part of the wire.

The rough side of the wire connects to the white (neutral) wire in the outlet box. The smooth side connects to the black (hot) wire in the outlet box.

Major fixture parts manufactured in Germany by Holtkötter Leuchten GmbH. Final assembly by Holtkötter International, Inc. in South St. Paul, MN.

Holtkötter® & Holtkötter Leuchten® are registered trademarks of Holtkötter International, Inc. All Rights Reserved.

© Holtkötter International, Inc.